

# MA265 I/O ユニット

## MA265 のコマンド送出と動作

□リレーの ON 動作

SID 0x318

0x00,0x01,0x38,0x00,0x00,0x00,0x00,0x00

RY1-ON

0x00,0x00,0x00,0x00,0x00,0x00,0x00,0x00

RY1-OFF

0x01,0x01,0x00,0x00,0x00,0x00,0x00,0x00

RY2-ON

0x01,0x00,0x00,0x00,0x00,0x00,0x00,0x00

RY2-OFF

0x02,0x01,0x00,0x00,0x00,0x00,0x00,0x00

RY3-ON

0x02,0x00,0x00,0x00,0x00,0x00,0x00,0x00

RY3-OFF

0x03,0x01,0x00,0x00,0x00,0x00,0x00,0x00

RY4-ON

0x03,0x00,0x00,0x00,0x00,0x00,0x00,0x00

RY4-OFF